

Redundant Power Supply Quick Installation Guide

1.




Find the bracket from redundant PSU package;



2. Attach the bracket to case behind the mounting window (mounting window for redundant power supply come in case accessories box).



3. Attach the bracket to PSU hosting from inside by small flat head screws (see red circle in the picture) from PSU package

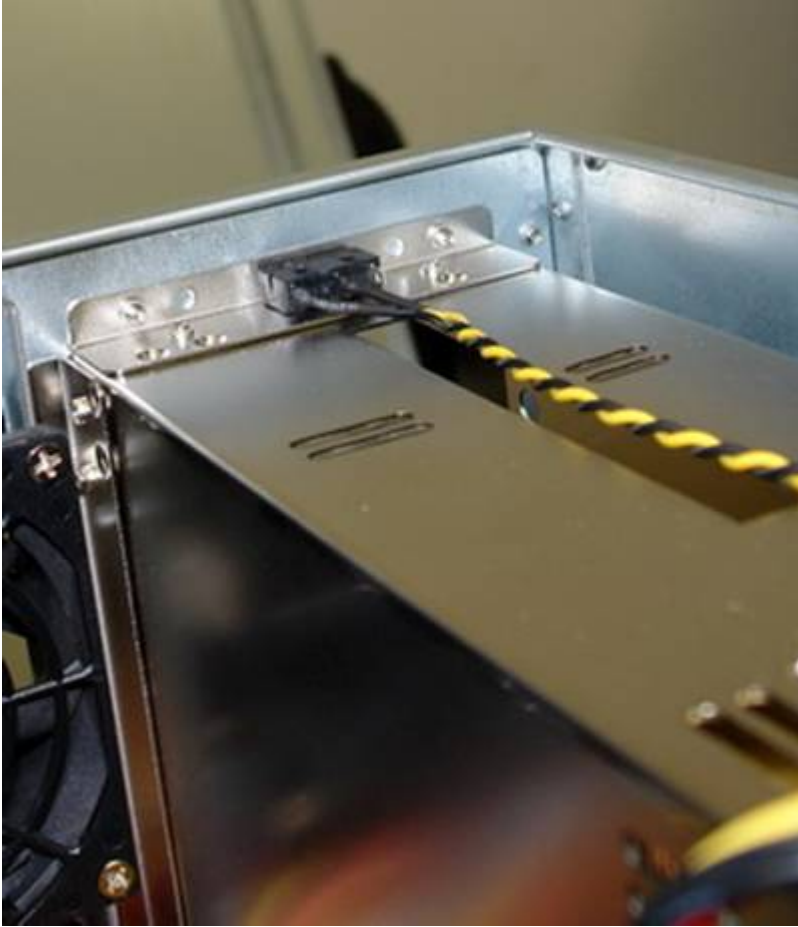

4. Inside case view

Please notice the way short horizontal bracket and long vertical bracket secure the PSU housing behind the mounting window come with case.